ACCESSORIES INCLUDED

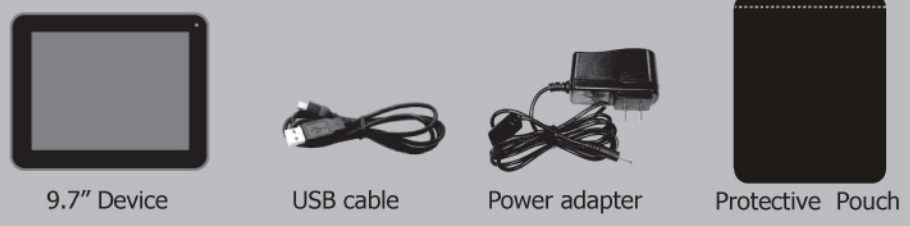

9.7” Device | USB cable | Power adapter | Protective Pouch

CONTROLS AND CONNECTIONS

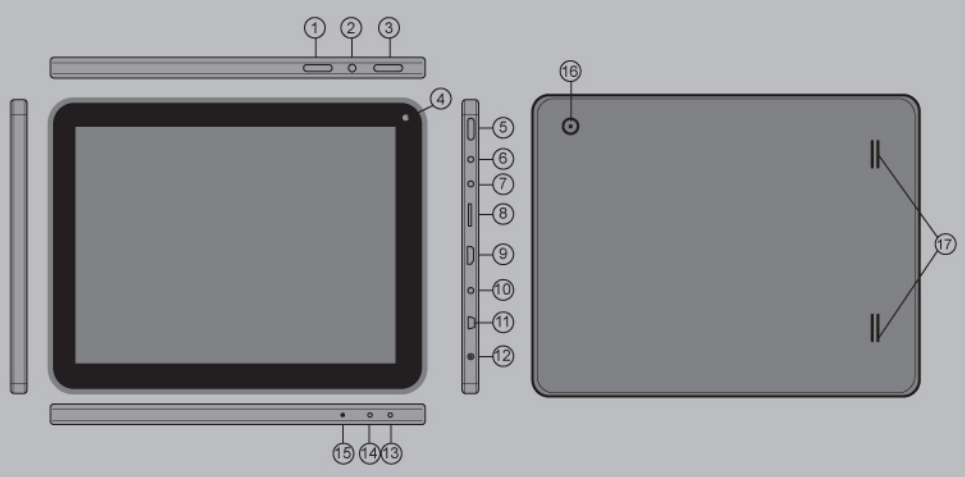

1. Menu Key
2. Home Key
3. Backspace Key
4. Front Camera
5. Power
6. Volume +
7. Volume -
8. Micro SD Slot
9. HDMI Jack
10. Earphone Jack
11. MINI-USB Jack
12. DC-IN Jack
13. Microphone
14. Reset
15. Indicator Lights
16. Back Camera
17. Speaker

INSERT MEMORY CARD

NOTICE Please pay attention to the direction you insert the card (see picture), or the device will be damaged. DO NOT take out the memory card when the tablet is on. Content may be lost.

CHARGING

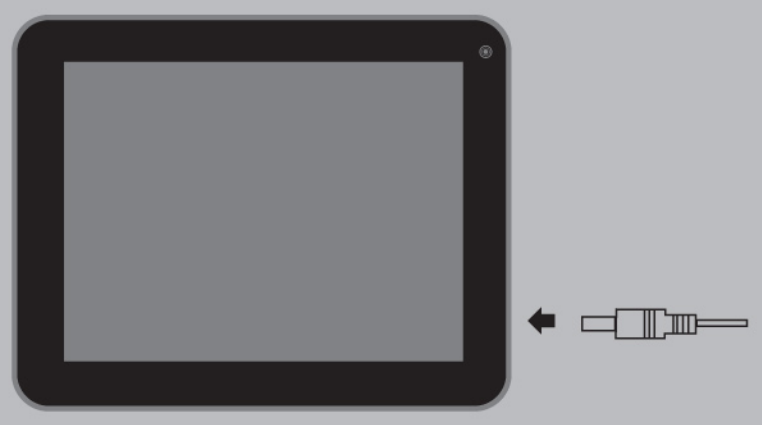

NOTICE As shown in the diagram, make sure that the charge plug is inserted fully. ONLY use the supplied charger or you may damage the tablet.

IMPRESSION

9.7 ” ANDROID TABLET QUICK START GUIDE

INTERFACE INTRODUCTION

➢ Home Screen Interface:

The home screen is the starting point of your tablet. It displays applications, widgets, shortcuts and other features. You can customize the home screen with different wallpapers and display the items you choose.
On the bottom left corner of the screen, you will find three navigation buttons.

➢ Touch Keys

Back: The back button returns you to the previous screen you were on. Once you have backed up all the way to the home screen, the button will not take you back any further.

Home: Returns you to the home screen.

Recent apps: Displays a list of recently used apps. To open a previous app, touch it. To remove the app from the list, swipe from left or right.

After a short time without getting used, these buttons may shrink to dots or fade away, depending on the current app. To bring them back, touch their location.

At the lift top of the screen, you will see a icon “Google”, you can tap it for searching on Google quickly.

Status icons: On the right bottom of the screen, you will see Status icons, it will tell you which apps have sent you notifications; for example, that a message has arrived, or your tablet have connected with PC.

To see your notifications, swipe your finger up from the right bottom of the screen.

System icons: on the right corner of the screen display the current wireless and network connection strength, battery level, time, and more.

➢ All Apps Screen

All Apps Screen will show you all applications you've installed in your tablet, you can touch any icon to start the program up.Touch and Drag the screen to the lift or touch "WIDGETS", you will see the Widgets Screen which shows you all widgets in your tablet, you can touch and hold it to the Home Screen.

Safety Advice

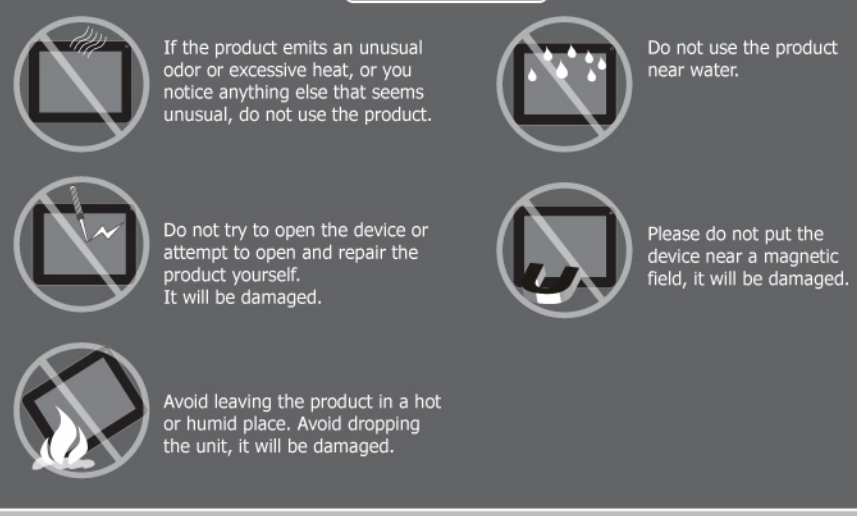
If the product emits an unusual odor or excessive heat, or you notice anything else that seems unusual, do not use the product.
Do not use the product near water.
Do not try to open the device or attempt to open and repair the product yourself.
It will be damaged.
Please do not put the device near a magnetic field, it will be damaged.
Avoid leaving the product in a hot or humid place. Avoid dropping the unit, it will be damaged.